
 
How to Configure Basic Settings

Refer to HD Venue User and Set-up Guide on www.revolabs.com

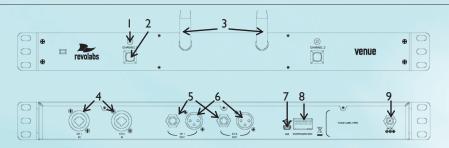

- 1. Channel LED indicators: Displays microphone mute and pairing states
- 2. Pairing Push Buttons: For pairing microphones to Base Station
- 3. Antennae
- 4. Female XLR and ¼" Balanced Combo Input Connectors
- 5. Female ¼" Balanced Output Connectors
- 6. Male XLR Balanced Output Connectors
- 7. Mini-USB Serial Interface (firmware updates only)
- 8. Configuration DIP Switches
- 9. Power In Locking Receptacle (5VDC)



| DIP Switch | Feature | Off (Default) | | On | |
|------------|--------------------|---|------|---|-----|
| 1 | Output Mixing | Individual Outputs | | Mixed Output | |
| 2 | Low Pass Filter | No LPF | | LPF | |
| 3 | Audio Output Level | Line Level | | Mic Level | |
| 4 | Mute | Local Mute | | No Local Mute | |
| 5 | Sharing Mode | Not Sharing: all frequencies will be used | | Sharing: ½ frequencies will be used | |
| 6 | A/B Frequencies | A Frequencies | | B Frequencies | |
| | | 300' | 150' | 75' | 25' |
| 7 | Transmit Power | Off | On | Off | On |
| 8 | Transmit Power | Off | Off | On | On |

Regulatory Information can be found in User Guide

Technical Support 9:00 a.m. to 5:00 p.m. EST 1–800–326–1088 support@revolabs.com www.revolabs.com

Box Contents

NOTE: Revolabs Wireless Microphones Ship in Separate Boxes



Rack-mountable HD Venue Base Station with 2 Diversity Antenna (shown attached)







Universal power supply plus plug Quantity 2

USB Cable for Firmware Upgrades

Charger Base

How to Assemble

- 1. Rack-mount HD Venue Base Station
- 2. Attach the diversity antennas (2 SMA female connectors)
- 3. Plug the power supply into Base Station and appropriate electrical outlet
- 4. Plug cables into AV equipment
- 5. Plug power supply into Charger Base and appropriate electrical outlet
- 6. Pair Revolabs Wireless Microphones to Base Station using the pairing instructions
- 7. Place microphones into Charger Base
- 8. Download firmware updates from www.revolabs.com/downloads

PHANTOM POWER MUST BE OFF. PHANTOM POWER MAY CAUSE DAMAGE TO THE BASE STATION

Technical Support 9:00 a.m. to 5:00 p.m. EST 1–800–326–1088 support@revolabs.com www.revolabs.com





Hear Every Word!