

# AiroDoctor Air Purifier

# User Manual

---

**WAD-M20**

---



Please read this manual completely before using this product

Dear Customer,

Thank you for purchasing our AiroDoctor.

In order to facilitate the installation and use of this product, we recommend that you carefully read this manual and keep it stored safely. To ensure that you always enjoy fresh air, use this manual for qualified and standardized installation, proper use, and maintenance. This will ensure you always enjoy fresh air.

If any questions arise from use, please consult this manual. If it is in accordance with the warranty, we kindly welcome you to contact us with the address and phone on the card. We welcome any comments you have about our product and service.

# CONTENTS


---

INSTALLATION/USE INSTRUCTIONS	01
IMPORTANT SAFETY INSTRUCTIONS	02
COMPONENTS	05
FEATURES	06
INSTALLING THE PRODUCT	07
CLEANING & MAINTENANCE	10
FILTER REPLACEMENT	11
TROUBLESHOOTING	12
SPECIFICATIONS	13


# INSTALLATION/USE INSTRUCTIONS

---


- Do not place in direct sunlight, facing air conditioner vents, or heated places. It may cause the unit to warp, deteriorate, discolor, or malfunction.

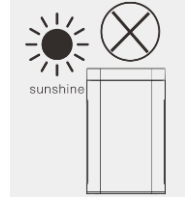


- Do not place near TVs or radios. This may distort images or produce noise. Using the purifier remote may cause interference with your TV or radio. Please place at a distance of 1m or more away from these devices. In addition, if you are sharing outlets with these devices, plugging in the purifier may distort images or produce noise. If this happens, please plug the purifier into a different outlet.

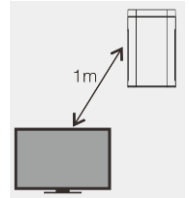


- For effective room circulation, place the product approximately 30cm or more away from walls or other objects. Please keep the backside at least 20cm away from the wall to enable it to work more effectively.

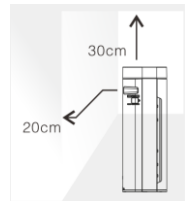

- Do not place items on the main product or it may lead to malfunction. Be careful not to place magnets or any other metal items on here.

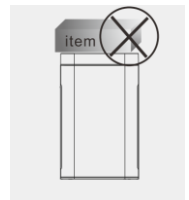

- Do not block the exhaust vent or supply vent. For example, do not place an object on top of the exhaust vent or in front of the supply vent.

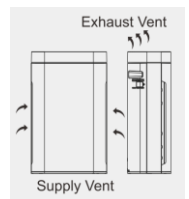

- Do not place flammable substances (sprays, gases, etc.) around the product.





- Do not plug the power plug into one outlet (multitap) with other products.

- Do not install on narrow or uneven floors.

# IMPORTANT SAFETY INSTRUCTIONS

---

- Do not pick up or move the product while it is running. When moving or storing, do not pull the power cord. This may cause a short circuit or do internal damage to the power cord. This may lead to a fire or electric shock.
- Do not damage power cord or outlet. Do not cut, excessively twist, pull, or bend the power cord. If the power cord is damaged, for your safety please call the manufacturer, service department, or a trained professional to replace it.
- Do not use power supplies, universal sockets, or connective devices that exceed the recommended power rating. Use only 220V~ 5A AC power. Using a universal socket or connected power source that exceeds this rating may lead to overheating and cause a fire.
- Do not touch the plug with wet hands. This may result in electrical shock.
- Do not place your fingers or metal objects into the air vents. This may cause electrical shock or injury.
- To avoid electrical shock or fire, do not allow water, flammable cleaners, or other liquids enter the product.
- Do not use this product near gas appliances, heating appliances, or stoves.

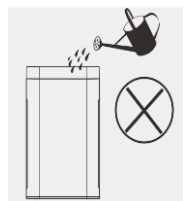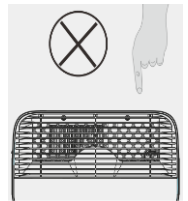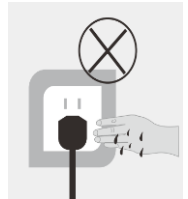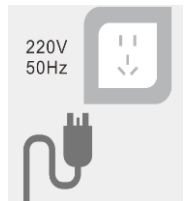


# IMPORTANT SAFETY INSTRUCTIONS

---

- Make sure the remote is placed somewhere children cannot reach to avoid unintended damage.



- Use the handle on the side of the main body when moving the product. Forcing other parts to pull can cause product damage and injury.

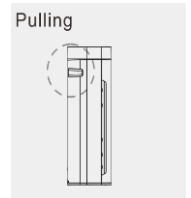

- Do not use the air purifier in a room that is using an incense-type insect killer. Chemical residue may accumulate in the product and then be released, causing harm to physical health. After using insect killer or mosquito coils, allow the room to be fully ventilated before using the air purifier.
- Should any of the following conditions occur, turn off the machine immediately (electrical shock, sparks, or smoke may occur):
  - Strange noises or vibrations during operation.
  - Product is unusually hot, or has a burnt odor.
- Please clean the plug regularly.  
If there is dust or moisture on the plug it could damage it. This may result in a fire.
  - Unplug the power cord, and wipe it with a dry cloth.
  - Unplug the power cord if the appliance is not used for a long period of time.
- Before electrical maintenance, make sure to unplug the device.
  - The product may suddenly turn on, leading to electrical shock or injury.
- Please plug the power cord securely into the power outlet. If the plug is not securely seated, this may cause overheating which may lead to electrical shock and even fire.
  - Do not use a damaged plug or loose power outlet.



# IMPORTANT SAFETY INSTRUCTIONS

---

- Please unplug the cord using the plug insulator.
  - Pulling the power cord to unplug it may cause damage to the power cord, electrical cord, electrical shock, short circuit, or fire.
  
- Should any of the following circumstances arise, please turn off the machine power immediately and contact the service department:
  - A switch does not work.
  - Power cord or plug is unusually hot.
  - You detect an abnormal sound or vibration.
  - Any other abnormalities or malfunctions.
  
- To prevent the hazard of electrical shock, only trained professionals should disassemble the machine.

# COMPONENTS

---

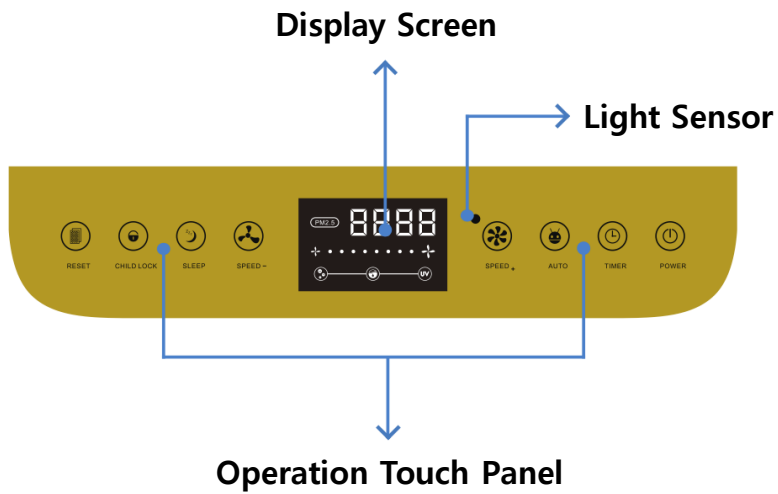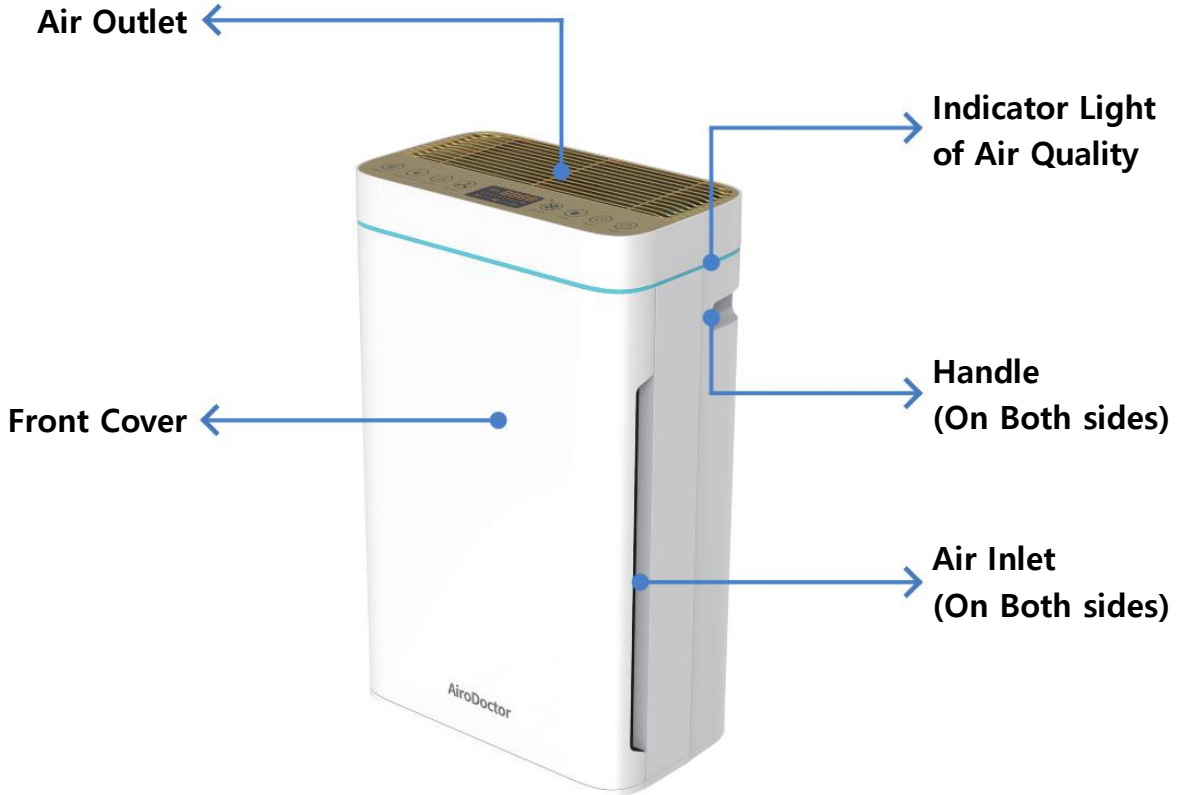


# FEATURES

## Key Features



- Using eco-friendly UV LED photocatalytic technology
- Excellent Sterilization & Deodorization Effect with LED
- Secondary product zero due to air pollutant removal
- No Ozone
- 99.9% Removes odor, harmful gas and bacteria by decomposition
- 4-steps filtering system for perfect Air Purification (Pre → Carbon → HEPA → LED Photocatalytic Filter)
- Excellent effect when installed in children, patient and elderly facilities

## Filtering Systems

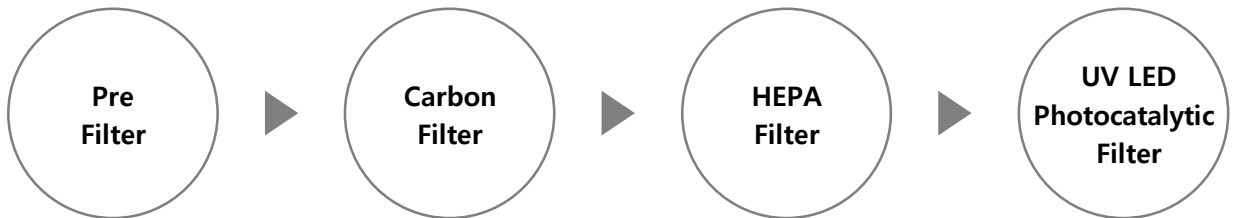

<b>Pre Filter</b>	Effectively filter out large particles such as hair, fibers, dust and hair above 5µm (micrometers).
<b>Carbon Filter</b>	Using high-efficiency cell activated charcoal, tobacco smoke, chemicals, odors, harmful substances, organic compounds (VOCs) are purified primarily.
<b>HEPA Filter</b>	Up to 99.9% of ultra-fine dust, fungi, bacteria and harmful substances below 0.3µm (micrometer) are collected and removed.
<b>UV LED Photocatalytic Filter</b>	Use eco-friendly UV LED photocatalytic technology to fundamentally decompose and eliminate harmful substances, viruses, germs, odors, etc.


※ Carbon Filter and HEPA Filter are integrated Filters.




# INSTALLING THE PRODUCT

## Installing the Filter

1. Removing the Front Cover  
(Use both hands to pull)

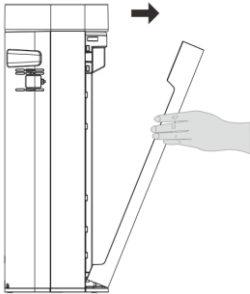

2. Removing the Pre Filter

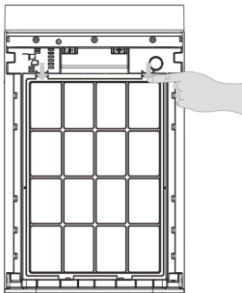


3. Take the filter out of the Packaging.




※ Make sure to remove plastic bag off the filter before use.

4. There are differences between the inside and the outside of the absorption filter (Carbon Filter and HEPA Filter).

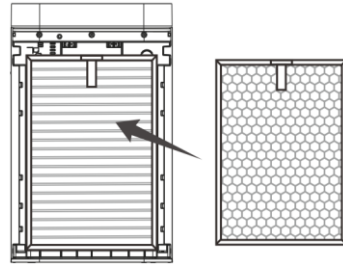


※ The side with a handle should be placed outwards.

5. There are differences between the inside and the outside of the Pre Filter.

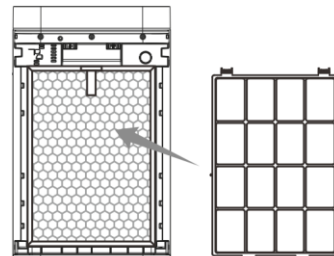

※ The side with a handle should be placed outwards.



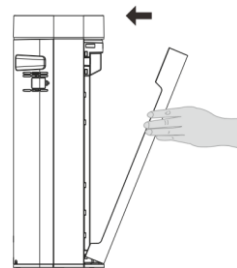




6. Install the Front Cover.



※ The product will not run if the front cover is uncovered.






# INSTALLING THE PRODUCT

## Functional Description

Icon	Name	Description																										
	Power ON/OFF	When the product is plugged in and on standby, "POWER" button works to turn on the product. After this button being touched for the second time, the product turns to standby state. (The icon is red when standby and green when on) If you press the power button on the operation panel while the product is running, the product will enter into standby mode. (And the icon will turn red)																										
	TIMER	When the product is on, every touch of "TIMER" button will add 1 hour to the timing. When it accumulates to 12 hours, one more touch will turn it off. (The icon will stay on when the product operates in timing mode, otherwise it will be off)																										
	AUTO	When the product is on, after "AUTO" button being touched, negative ion generator and germicidal lamp will start to work, and the gear will be changed according to sensor's data. (The icon will stay on when the product operates in auto mode, otherwise it will be off). If users change "wind speed" under auto mode, the product will quit this mode automatically. <table border="1" data-bbox="529 1087 1296 1336"> <thead> <tr> <th>Gear</th> <th>PM 2.5 Data</th> <th>Light Color</th> <th>Gear</th> <th>PM 2.5 Data</th> <th>Light Color</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0~50</td> <td rowspan="2">Green (Good)</td> <td>5</td> <td>121~140</td> <td rowspan="2">Yellow (Bad)</td> </tr> <tr> <td>2</td> <td>51~80</td> <td>6</td> <td>141~160</td> </tr> <tr> <td>3</td> <td>80~100</td> <td rowspan="2">Blue (Average)</td> <td>7</td> <td>161~300</td> <td rowspan="2">Red (Very Bad)</td> </tr> <tr> <td>4</td> <td>101~120</td> <td>8</td> <td>301~500</td> </tr> </tbody> </table>	Gear	PM 2.5 Data	Light Color	Gear	PM 2.5 Data	Light Color	1	0~50	Green (Good)	5	121~140	Yellow (Bad)	2	51~80	6	141~160	3	80~100	Blue (Average)	7	161~300	Red (Very Bad)	4	101~120	8	301~500
Gear	PM 2.5 Data	Light Color	Gear	PM 2.5 Data	Light Color																							
1	0~50	Green (Good)	5	121~140	Yellow (Bad)																							
2	51~80		6	141~160																								
3	80~100	Blue (Average)	7	161~300	Red (Very Bad)																							
4	101~120		8	301~500																								
  SPEED - SPEED +	SPEED	When the product is on, touch "SPEED -" or "SPEED +" to switch the gear and change the operating speed. After gear being changed, the motor will work only at the setting level without being affected by the sensor. (Touch "SPEED" button, and the product will quit auto mode)																										
	SLEEP	When the product is on, it will turn to sleeping mode 5 seconds after the "SLEEP" button being pressed. In sleeping mode, all the lights turns off and the product works at the first gear. Press any button to wake it up and then press "SLEEP" button to quit sleeping mode, or press "SPEED -" / "SPEED +" / "AUTO" button to quit after waking it up.																										
	CHILD LOCK	When the product is on, touch "CHILD LOCK" button to lock all the buttons. At that time all the buttons have no reaction to any touch, while the product still works how it is set before. Press "CHILD LOCK" button for 5 seconds and the product will quit this mode. (The icon will stay on when the machine operates in child lock mode, otherwise it will be off)																										

# INSTALLING THE PRODUCT

## Functional Description

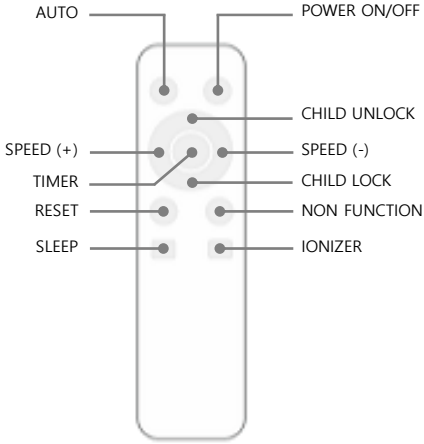Icon	Name	Description
	RESET	<p>This product has a regular reminding function of filter replacement, which works every 320 hours and 1500 hours, the indicator light on the panel will flash to inform users to clean the filter after cleaning, press the "RESET" button for 5 seconds, then the light will stop flashing. After every 1500 hours, the indicator light will stay on to inform users to renew the filter. At that time, press the button for 5 seconds so that the timing can be reset.</p> <p>When the product is on, press this button and the total working time will be shown in hours on the screen. This equals a check of working time.</p>
	IONIZER	<p>When the product is on, pressing "IONIZER" remote controller button will turn on negative ion mode, and pressing one more time will turn it off.</p>
	Light-sensitive	<p>In auto mode, the product will turn to sleeping mode 2 minutes after the surrounding light &lt;5x. It will quit sleeping mode 3 minutes after the surrounding light &gt;5x, and then continue to work in auto mode.</p>
	REMOTE CONTROLLER	<p>This product is provided with a remote controller powered by lithium 3V dry cells. (please take out the dry cell if the remote control will not be used for long periods)</p> <p>There is a one-to-one correspondence between the buttons on the remote controller and the operation panel. The functions and operation methods are generally the same.</p> <div style="text-align: center;">  </div>

# CLEANING & MAINTENANCE

---

※ Please proceed with the power plug before cleaning & maintenance of the product.


- Please use a soft cloth to remove stains and dirt from the product body.  
For stains that cannot be gently wiped off, apply on an appropriate amount of water or diluted neutral detergent and wipe off.

- **Pre Filter (approximately twice per month)**



- Clean the surface of the filter with a vacuum cleaner or wash with water. Allow to dry thoroughly.

- **Integrated (Carbon + HEPA) Filter (approximately once every two months)**

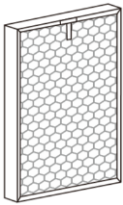


- Clean the dust from the front of the filter with a vacuum cleaner.
- The filter is delicate. Do not press too hard on the filter while vacuuming.
- Place the filter in a ventilated area, this will allow harmful gasses and germs to dissipate. Do not place under too much sun exposure.
- Do not use water to clean this filter.

- **IONIZER (Anion producer)**



- When you hear the product produce a creaking sound, use a paintbrush as a cleaning tool. Insert the brush from the ventilation window above the anion emission head. Regularly clean the dust all around the emission head.

- **Particulate sensor (approximately once every two months)**

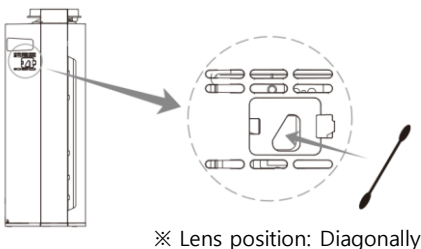

- Wipe the lens with a dry cotton swab periodically to remove any dirt. (Moisture or tobacco smoke residue may cause it to no longer work properly)
- Do not insert the cotton swab into any area other than the lens.
- Be sure to unplug the power cord.

# FILTER REPLACEMENT

---

※ You may need to replace filters sooner depending on where and how you use the appliance (such as a household with a large smoking population or areas with higher air pollution).

Since the filter is a consumable, it needs to be purchased separately and replaced if it is over its lifetime during the warranty period (such as when the air clean efficiency is noticeably lower).

---

## Recommended filter cleaning/replacement period

Item	Cleaning period	Replacement period	Remarks
<b>Pre Filter</b>	Twice a month	6 months	
<b>Integrated Filter (Carbon + HEPA)</b>	Once every two months	12 months	
<b>LED Photocatalytic Filter</b>	Once a year	-	

※ Please refer to page 10 for how to clean the filter.

※ Photocatalytic filters do not require a separate replacement. Do not remove it when cleaning and replacing. If there is an abnormality in the photocatalytic filter, please contact the retailer where you purchased the product.

# TROUBLESHOOTING

※ Before you request a complaint for a breakdown, please check the following troubleshooting instructions and contact the retailer where you purchased the product if the issue is not resolved.

Malfunction	Inspect / How to fix
Cannot turn on power or pressing button has no response.	<ol style="list-style-type: none"> <li>1. Make sure the power plug is fully inserted into the outlet, then press the power button to use it.</li> <li>2. Make sure the front cover is inserted correctly.</li> <li>3. Please make sure that the product is safely installed on a flat floor.</li> <li>4. If the screen has a childlock turned on, press the lock button for 5 seconds to turn it off and use it.</li> </ol>
When the air is dirty but the air condition indicator is good (Green).	<ol style="list-style-type: none"> <li>1. Please move the product to a position where you can easily inhale dirty air, dust, etc.</li> </ol>
The air condition light is still very bad (Red) even though the product has been up for a long time.	<ol style="list-style-type: none"> <li>1. Please refer to the manual to clean the particulate sensor. (See page 10)</li> </ol>
When a strange sound (knocking, chirping) flies in the product.	<ol style="list-style-type: none"> <li>1. Please refer to the manual to clean the ionizer. (See page 10)</li> </ol>
When the product smells strange.	<ol style="list-style-type: none"> <li>1. Please clean the air intake and the internal filter (pre filter, integrated filter). (See page 10)</li> <li>2. If you haven't replaced the filter for a long time, please purchase and replace it.</li> </ol>
When the product feels like it doesn't improve air quality even after a long operation.	<ol style="list-style-type: none"> <li>1. Please make sure that the filter packaging (plastic bag) inside the product is properly removed.</li> <li>2. Please make sure that the filter combination order is correct.</li> </ol>
When the product is turned on and automatically switches to sleep mode shortly after.	<ol style="list-style-type: none"> <li>1. Please turn off sleep mode. (See page 10)</li> </ol>

※ In addition to the above, if a product abnormally occurs, please contact the store where you purchased the product and receive and A/S.

We are not responsible for any accidents caused by the arbitrary disassembly and repair of the product. (A/S impossibility)

# SPECIFICATIONS



<b>Product Name</b>	AiroDoctor Air Purifier
<b>Model Name</b>	WAD-M20
<b>Max. Room Size</b>	200 m <sup>2</sup>
<b>CADR (Clean Air Delivery Rate)</b>	480 m <sup>3</sup> /h
<b>Noise Level (Max.)</b>	55 dB
<b>Filter Type</b>	Pre Filter, Integrated (Carbon+HEPA) Filter, UV LED Photocatalytic Filter
<b>HEPA Filter Grade</b>	H13
<b>Fan Speed</b>	1 ~ 8 Levels
<b>Timer</b>	12 hours (max.), Set up in 1 hour increments
<b>Filter Replacement Notice</b>	Yes
<b>Indicator Light of Air Quality</b>	4 Levels Good(Green), Average(Blue), Yellow(Bad), Red(Very Bad)
<b>Energy Efficiency</b>	4 grade
<b>Rated Voltage</b>	AC 110-230V V, 50/60 Hz
<b>Power Consumption</b>	85 W
<b>Weight</b>	11.5 kg
<b>Outline Dimensions</b>	460 (W) x 230 (D) x 640 (H) mm

For perfect air

**AiroDoctor** and **Airo.Health**  
are trademarks of:

**ScreenSource GmbH**  
Köthener Str. 8  
06779 Raguhn-Jessnitz  
GERMANY

**Telephone:** +49 (0) 30 39886850

**E-Mail:** [hello@airo.health](mailto:hello@airo.health)

**Web:** [www.airo.health](http://www.airo.health)

**Commercial Register:**

District Court Stendal, HRB 24520

**VAT Information:**

Sales tax identification number  
according to § 27 a sales tax law:  
DE311493511